


# REDIPAVE INSTALLATION TOOL KIT

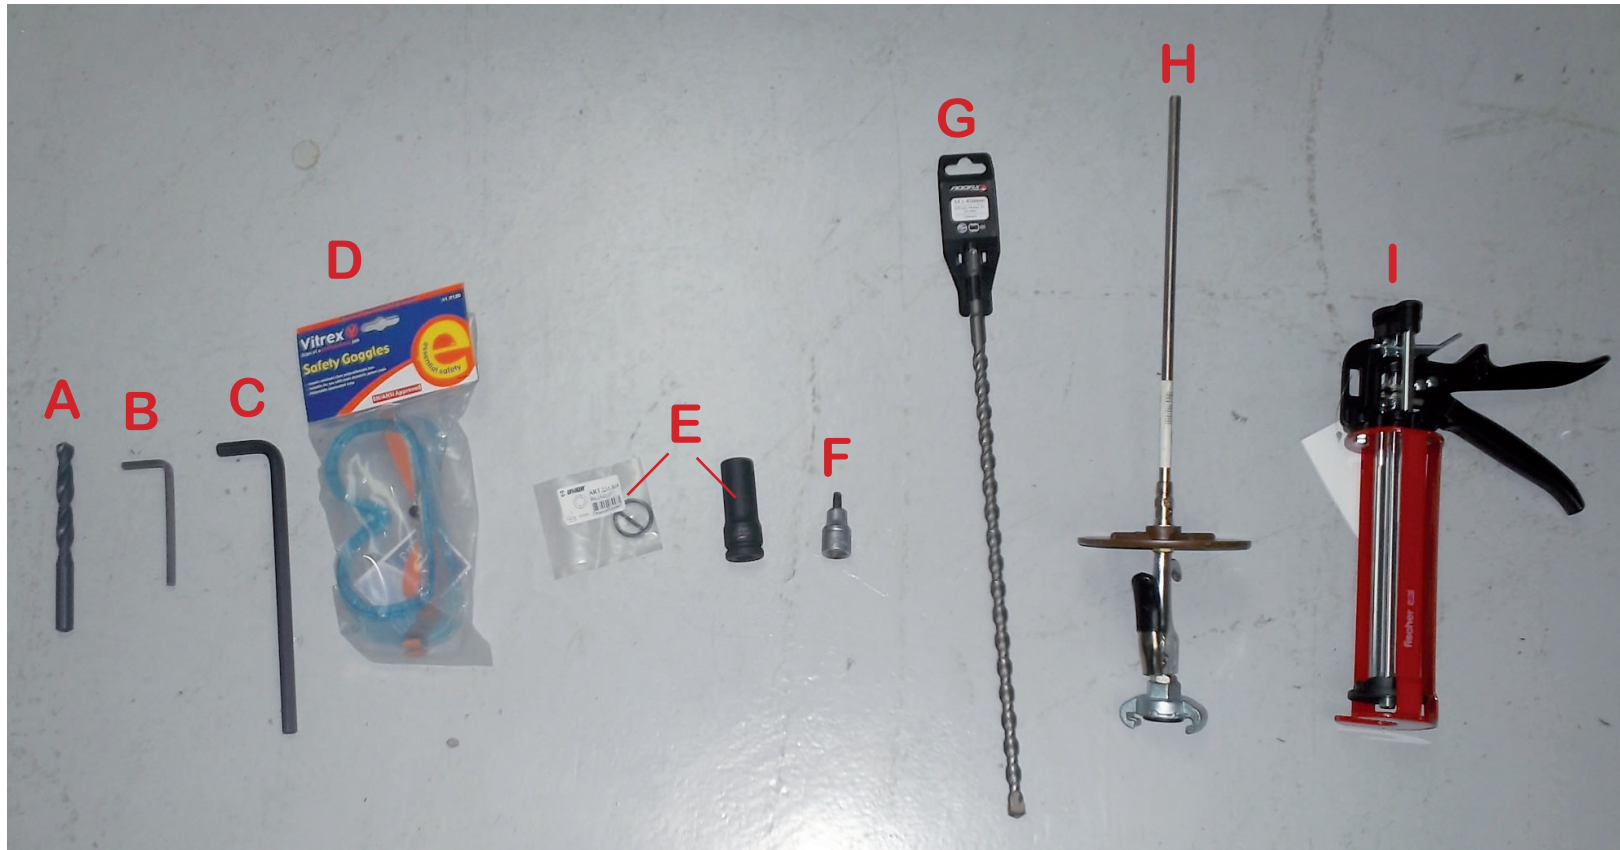

A- 13mm HSS Drill Bit

B- 6mm Short Arm Hex Key

C- 10mm Long Arm Hex Key

D- Goggles (Eye protection whilst drilling)

E- ½" Drive 17mm Deep Socket (For fixing hex head coach screws)

F- ½" Drive T40 Torque Bit (For fixing countersunk frame screws)

G- 14mm x 450mm SDS Masonry Drill (For drilling all holes)

H- 12" Long Nose Air Gun (For Blowing out drilled holes)

I- Resin Cartridge Gun (To suit resin cartridge)

  
REDIWELD

Traffic  
Products